Configuring the JNIOR for use with the Christie IMB

Last updated: December 11, 2018

The following information describes how to use the JNIOR with the Christie IMB server.

Please contact INTEG via e-mail at <u>rshulkosky@integpg.com</u> or via phone at 724-933-9350 extension 20 with any questions.

Overview

The Christie IMB can interact with the JNIOR two ways:

- 1) Directly control relay outputs on the JNIOR
- 2) Trigger macros on the JNIOR by sending the name of the macro to be executed to the JNIOR

You can use one or both methods. In order to use the <u>second method</u> above to execute macros on the JNIOR, the INTEG Cinema program must be installed on the JNIOR by the user. It is not installed at the factory.

Installing the Cinema Program

Cinema.JAR (for the Series 4 JNIOR) and Cinema.JNIOR (for the Series 3 JNIOR) are installed using the JNIOR Support Tool. The JNIOR Support Tool and the Update project that loads the Cinema program can be downloaded from the INTEG website at the following link.

http://www.integpg.com/support/cinema-jnior/

Please download the JNIOR Support Tool file and double click on it to install.

Please download the appropriate Cinema 'update project' zip file for your JNIOR, but do NOT unzip it. Go to the Update tab in the JNIOR Support Tool and click on the Open Project link and then navigate to where you saved the update project. The JNIOR Support Tool will unzip the project. Then click Publish Update to JNIOR and select your JNIOR.

NOTE: If this is the first time you are installing the Cinema program on your JNIOR, it is recommended that you leave all the update steps checked. If you have previously installed the Cinema program and only want to update to the latest version, then you only want the first and last steps checked. Uncheck all the other steps so you configuration is not changed.

Configuring the JNIOR and Christie IMB Communications

Please go to the System set-up - Automation and then the Devices tab in the Christie setup. Then Add a new Device - the Integ JNIOR.

1	oem-3xta4yatyoz - Tigh	tVNC Viewer		- 🗆 🗙
3 🖬 🖀 🗈 🗏 9	ବନ୍ଧି ପୋଧା 👘 🗟 🕤 🕤 🚳 🦓			
System O			CH	KISTIE
System				20
Devices	Add Remove		Cancel	Save
Macros	Device	e Configuration		
Input Cues				
Global Triggers				
General Storage	IMB Network Automation Audio Lice	enses Status N	Multi Projector	Dolby Atmos
Menu	Mi 🖳 Service	🝰 1 🕑	9 20	01:33:58 PM



<u>NOTE</u>: All of the commands will be sent from the Christie IMB to the JNIOR using the JNIOR protocol port 9200.

You will only need one Automation device set-up for the JNIOR.

When the Christie original software was first released, the easiest and most efficient way to have the Christie IMB interact with the JNIOR was to DISABLE the JNIOR login on the JNIOR. This may or may not still be true with any updates to the Christie software, but it should not hurt to disable the JNIOR login.

NOTE: How to disable the JNIOR login on the JNIOR is described on the next page.

If you disable the JNIOR login, then you can leave the username and password 'blank' on the Christie device set-up page. As shown below, you only need to enter the JNIOR IP address.

Once you have disabled the JNIOR login on the JNIOR and entered the JNIOR IP address, you can then click on the 'Test' button on the Christie device page as shown below. This will cause the Christie IMB to make a connection to the JNIOR and verify a successful connection.

NOTE: You must click on the SAVE button on the Christie Devices tab to save the JNIOR configuration. A pop-up window will alert you that you have not entered a username or password, but as long as you disable the login on the JNIOR, you can say OK.

2	oem-3xta4yaty	/oz - TightVNC Viewer 📃 🔍 🗙
A 🖬 🛍 🗈 🛛 🗗	ବନ୍ 💐 CHI ALL 🔤 ପ୍ ପ୍ 🔍 ବ୍	. 🖾
System Ok	(CHkiSTIE
System		20
Devices	Add Remove	Cancel
Macros	• JNIOR1 Integ JNIOR	Device Configuration
Input Cues	You only need to	Name Test
Global Triggers	IP address.	IP Address
		Username
	the JNIOR login	Password Leave blank
	on the JNIOR, you can leave the	
	username and password blank.	Communication Port 9200
	pacemera biarina	
General Storage	IMB Network RAutomation	Audio Licenses Status Multi Projector Dolby Atmos
🦬 Menu	🞯 💹 Ser	vice VNC 📸 1 🙆 🖓 🗐 01:34:43 PM

Disabling the JNIOR login

Even though the Christie can log into the JNIOR, it is typically recommended that you 'disable' the JNIOR server login on the JNIOR.

The JNIOR login can be disabled on both the JNIOR Series 4 and the older JNIOR Series 3 via the JNIOR web page. Both methods are described below since each JNIOR Series uses a different web page.

JNIOR Series 4

The JNIOR Series 4 web page can be launched by going to the Beacon Tab in the JNIOR Support Tool and 'right-clicking' on your JNIOR and going to Tools – Open Web page.

When the web page opens, go to the Configuration tab and then the Protocol web page down the left side. You will need to uncheck the Login Required box and enter jnior as the Anonymous User Name/ID to be used for the Christie connection.

Reboot the JNIOR.

Input/Output	Configuration Console Folde	ers Registry Syslog Peers About
Display	JNIOR Protocol Server Configurat	ion
Inputs	Server Enabled	
Counters	Port 9200	uncheck box
Metering	Login Required	
Serial I/O	Anonymous User Name/ID jnior	
Applications Mail-Account Mail-Profiles Events Network Security Telnet WebServer ETD Protocol Modules		enter jnior so connection is logged in with jnior credentials
Mouseover and us	se F1 for context sensitive help.	

JNIOR Series 3

For the JNIOR Series 3, the web page is a Java Applet that when loaded from the JNIOR is run in a browser. For security reasons, all browsers have stopped Java applications from running. To launch the web page for the JNIOR Series 3, you must launch a version that is installed with the JNIOR Support Tool. You should install the latest JNIOR Support Tool available on our website to make sure you have the feature.

To launch the Java application of the Series 3 web page running on your computer (and NOT in a web browser), you 'right-click' on your JNIOR go to Tools – Open Classic Monitor, Configure, Control Application as shown below.

NOTE: You will still need Java on your computer. You can get it from java.com

Beacon	Devices	Macro	Update	Registry Editor	Logs	Snapshot		
Serial N 618040	Number 0288	Hostnar jr61804	me 0288		IP Ac 24.1	ddress 23.78.246	Subnet Mask 255.255.255.0	MAC Address 9C:8D:1A:01:17:E8
618040	Query Configu Tools JNIOR I Reboot	ure .ist))))))	Open Open Open	Web Pa Telnet FTP	35.25.118 age	255.255.255.0	9C:8D:1A:01:17:85
_				Open	Classic	Monitor, Co	onfigure, Control A	pplication
				Open Macro Show Set Tin	Task M Execut JniorSy me	lanager Appl tion rsLog	ication	

The user can disable the login from the main JNIOR web page by going to the Configuration tab and then the Misc tab and unchecking the box as shown in the screen picture below.

		JNIOR
I/O Control Configuration F	legistry Editor 🛛 🤇	Command Line Applications About
	Sa	ve Configuration Cancel Changes Refresh Cur
Display Input / Output Alar	m Management	Events Management Slaving IP Config Misc.
Title	Value	
General		
Device Description	JNIOR	Do not change the JNIOR
ServiceHost IP		Protocol port number. Leave it
Enable logging to the /jniorio.log fil	e 🖌	2×9200 (the default setting)
Compression Enabled		as 7200 (the default setting).
NTP Server	clock.isc.org	
JNIOR Protocol		Uncheck the box for "JNIOR
JNIOR Server port number	9200	Server login enabled", click
JNIOR Server Login enabled	▲	Save Configuration shown
JNIOR Server Anonymous User	128	above
MODBUS		
Enable Mobus Server	1	Enter 128 as the value for the user
Modbus Server Port	502	Enter 126 as the value for the user
Modbus Server Login enabled		

Using the JNIOR Login with the Christie IMB

If you want to use the JNIOR login, you will need to enter the JNIOR IP address, the default username (jnior) and password (jnior) and the JNIOR protocol port (9200).

Do NOT disable the JNIOR login on the JNIOR.

eem-3xta4yatyoz - TightVNC Viewer	
🖹 🖬 🛍 🖹 😔 😻 🎒 Chri Alt 🗞 C	<u>२</u> २ २ 💀
System Ok	CHRISTIE
System	28
Devices Add Remove	Cancel Save
Macros Unior S1	Device Configuration
Input Cues	Name Test
Global Trigger	IP Address
Globar mygers	10.17.150.31 JNIOR IP address
	Usemame
	inior jnior
	Password
	jnior
	Communication Port
	set to 9200
General Storage IMB Network Automation	udio Licenses Status Multi Projector Dolby Atmos
Ser Menu	rvice 🛛 🙆 1 🧿 💡 🌋 07:19:33 PM

Building Macros on the Christie IMB

After you have added the JNIOR to the Christie IMB, you must now build 'macros' on the Christie to control the JNIOR relays and/or to trigger macros on the JNIOR. Go to the Automation section and click on Macros in the Christie IMB set-up software.

oem-3xta4yatyoz -	TightVNC Viewer	INC ADDRESS		
🧏 🖬 🖆 🔋 🛛	🗲 🥙 🗿 🕅 Alt 🖳 🤆	<u>२</u> २ २ २ 🐼		
System Ok				CHKISTIE
System				20
Devices	Add Remove		Canc	el Save
Macros	Copy Run Macro	Macro Activities		
Input Cues	FIRE_ALARM START_FLAT		Add E	dit Remove
Global Triggers	START_SCOPE END	Device Desc	ription	
chickin niggere	START_3D_FLAT	Jnior S1 Clos	e Relay 1 for 1	000ms
	START_3D_SCOPE Feature			
	Credits			
	Lights Up			
	Lights Down Lights Up Macro			
	Lights Down Macro			
General Storage I	MB Network Automation	udio Licenses State	us Multi Projec	ctor Dolby Atmos
🦙 Menu	🛄 🖬 Ser	vice 🛛 📸 1	0 9 3	B 07:15:58 PM

As shown below, you can Add an action to a macro on the Christie IMB that can Open/Close a relay on the JNIOR, Pulse a relay on the JNIOR, or Run a Macro on the JNIOR.

Syst	em Ok	CHkiSTI
ystem		2
Device	is Add Remove	Cancel Save
Mac /	Activity Properties	
Input	Automation Device	emov
	Jnior S1	
Global T	Activity Type	_
	Open/Close Relay	
	Pulse Reidy Run Macro	
	Aco	ept Cancel
and ou	mane IMB Network Automation Audio Licenses Status	Multi Projector Dolby Atmos

Below is an example of the Pulse Relay command. You must select the relay number, whether you want to Open or Close the relay and how long to pulse it on (or off).

🐨 oem-3xta4	lyatyoz - Tig	htVNC Viewer		ALC: NO.		Constant Products	
2 🖬 🛍	🗈 II 🤄	୬ 🔊 🎉 ା	ri Alt 🖳 🖳	€ € €	*		
Syst	tem Ok					СН	KISTIE
System							20
Device	es	Add	Remove			Cancel	Save
Mac	Activity	Properties					
Input	Automat	ion Device		Relay Number	C	Duration (ms)	emove
	Jnior S1		•	1	• 5	00	
Global T	Activity	Туре		Set Relay			
	Pulse Re	lay		Open	-		
					Accept	Cano	el
General St	orage IM	B Network	utomation	Audio Licenses	Status N	Aulti Projector	Dolby Atmos
Men	u	(🔟 🖬 s	ervice	61 0	9 38	03:03:44 PM

Below is what the Christie IMB macro looks like that pulses relay output number 1 on the JNIOR for 1000 milliseconds.

Syst	tem Ok					СН	KISTIE
System							20
Device	es	Add	Remove			Cancel	Save
Macro	os	Сору	Run Macro	Macro Activ	ities		
Input Co	ues	FIRE_ALARM START_FLAT	_	_	Add	Edit	Remove
Global Tric	opers	END	E	Device	Descriptio	n	
		START_3D_FL START_3D_SC Feature Credits Lights Up Lights Down Lights Down Mi Lights Down Mi	AT COPE 0 BCTD	Jnior S1	Close Rel	lay 1 for 1000m:	5
ionoral St	orage	MB Network	Automation A	udio Licenses	Status N	fulti Projector	Dolby Atmos

You can also add an action to a macro on the Christie IMB that will trigger a macro on the JNIOR. Select the Run Macro command and enter the name of the macro on the JNIOR to run.

em-3xta4yatyoz - TightVNC Viewer	
🥦 🖬 😭 🚺 📕 😏 🛷 觸 Chit Alt	⊫⊨ @, Q, @, @, ₩
System Ok	CHKISTIE
System	28
Devices Add Rem	ove Cancel Save
Max Activity Properties	
Automation Device	Macro Name emove
Jnior S1	
Global T Activity Type	
Run Macro	
	Accept Cancel
General Storage IMB Network Automat	Audio Licenses Status MultiProjector Dolby Atmos
Menu 😡 k	Service 🙆 1 🞯 🢡 🎉 03:03:44 PM

Below is an example of a macro on the Christie IMB that has the action to run a macro on the JNIOR called Lights Up

NOTE: The Christie IMB does NOT like spaces in the macro names. All of the macros on the JNIOR must not have any spaces. Please eliminate any spaces in the macro names or replace them with an underscore '_'

System Devices Macros Input Cues Global Triggers	Add Copy FIRE_ALARM START_FLAT START_SCOPE END	Remove Run Macro	Cancel Save Cancel Save Macro Activities Add Edit Remove
Devices Macros Input Cues Global Triggers	Add Copy FIRE_ALARM START_FLAT START_SCOPE END	Remove Run Macro	Cancel Save Macro Activities Add Edit Remove
Macros Input Cues Global Triggers	Copy FIRE_ALARM START_FLAT START_SCOPE END	Run Macro	Macro Activities
Input Cues Global Triggers	FIRE_ALARM START_FLAT START_SCOPE END		Add Edit Remove
	START_3D_FL START_3D_SC Feature Credits Lights Up Lights Up Lights Up Macro Lights Up Macro Lights Down Ma	AT KOPE	Jnior S1 Run macro 'Lights_Up'

Controlling the Christie IMB from the JNIOR

If you want the JNIOR to be able to Start and Stop the Christie player, then you have to do the following.

Configure the Christie IMB as a RAW ETHERNET device in the Cinema devices file. The JNIOR will communicate with port 5111 on the Christie IMB.

NOTE: The termination string in the example below is set to 'None'. Please check whether your Christie set-up needs a termination string or not.



Link your Devices file to the Macro file and then add actions that will send the appropriate string of text to the Christie. In the example below, the actions to send the strings IN1=1 and IN2=1 were created and added to two different macros.

NOTE: You will have to configure the Christie IMB to recognize these two strings so that when the Christie receives IN1=1 it will Play the Show and when it receives IN2=1 it will Stop the Show.

NOTE: <u>You can select any text that you want for these actions</u>. IN1=1 and IN2=2 are just examples. The strings are only sent to port 5111 when the macro is executed.

s and Settings\rshulkos Tool\Files\macro_Christ tion View lame Output 1 Output 2 Output 2 Output 3 Output 4 Output 5 Output 6 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ky.INTEGPG2/Application D4 ie_IMB.csv ROUT 1 ROUT 2 ROUT 3 ROUT 4 ROUT 5 ROUT 6 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Action Close Pulse Close Pulse	olvFiles\devices_christie_lM Data 1 1 1 1 1 1 1 1 1 1 1 1	IB.csv Help
Tool/Files/macro_Christ tion View lame Output 1 Output 2 Output 3 Output 4 Output 5 Output 5 Output 5 Output 7 Output 7 Output 8 Output 9 Output 10 Output 10 Output 12	Device ROUT 1 ROUT 2 ROUT 3 ROUT 5 ROUT 6 ROUT 8 ROUT 9 ROUT 9 ROUT 9 ROUT 9 ROUT 10 ROUT 11	Action Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	Data 1 1 1 1 1 1 1 1 1 1 1	Help
I oolh-lies\macro_Lhrist tion View Iame Output 1 Output 2 Output 3 Output 4 Output 5 Output 5 Output 5 Output 7 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	Pevice ROUT 1 ROUT 2 ROUT 3 ROUT 4 ROUT 5 ROUT 6 ROUT 7 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Action Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	Data 1 1 1 1 1 1 1 1 1 1 1	Help
tion View Jame Output 1 Output 2 Output 2 Output 3 Output 5 Output 6 Output 5 Output 6 Output 7 Output 8 Output 10 Output 11 Output 12	Device ROUT 1 ROUT 2 ROUT 3 ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Action Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	Data 1 1 1 1 1 1 1 1 1 1 1	Help
lame Output 1 Output 2 Output 3 Output 4 Output 5 Output 5 Output 5 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	Device ROUT 1 ROUT 2 ROUT 3 ROUT 4 ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Action Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	Data 1 1 1 1 1 1 1 1 1 1 1 1 1	Help
Output 1 Output 2 Output 3 Output 4 Output 5 Output 5 Output 5 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 1 ROUT 2 ROUT 3 ROUT 4 ROUT 5 ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse		
Output 2 Output 3 Output 4 Output 5 Output 5 Output 6 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 2 ROUT 3 ROUT 4 ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 10 ROUT 10 ROUT 10	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1 1 1 1 1	
Output 3 Output 4 Output 5 Output 5 Output 7 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 3 ROUT 4 ROUT 5 ROUT 6 ROUT 7 ROUT 7 ROUT 9 ROUT 10 ROUT 10	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1 1 1 1 1	
Output 4 Output 5 Output 6 Output 7 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 4 ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1 1 1	
Output 5 Output 6 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 5 ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1 1 1	
Output 6 Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 6 ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1 1	
Output 7 Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 7 ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1 1	
Output 8 Output 9 Output 10 Output 11 Output 12	ROUT 8 ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse Close Pulse	1 1 1	
Output 9 Output 10 Output 11 Output 12	ROUT 9 ROUT 10 ROUT 11	Close Pulse Close Pulse Close Pulse	1 1	
Output 10 Output 11 Output 12	ROUT 10 ROUT 11	Close Pulse Close Pulse	1	
Output 11 Output 12	ROUT 11	Close Pulse	1	
Output 12	0.01/07.4.0		•	
	ROUT 12	Close Pulse	1	
Output 13	ROUT 13	Close Pulse	1	
Output 14	ROUT 14	Close Pulse	1	
Output 15	ROUT 15	Close Pulse	1	
Output 16	ROUT 16	Close Pulse	1	
Input 1	DIN 1	Soft Pulse	1	
Input 2	DIN 2	Soft Pulse	1	
Input 3	DIN 3	Soft Pulse	1	
Input 4	DIN 4	Soft Pulse	1	
Input 5	DIN 5	Soft Pulse	1	
Input 6	DIN 6	Soft Pulse	1	
Input 7	DIN 7	Soft Pulse	1	
Input 8	DIN 8	Soft Pulse	1	
Play Input 1 ON	Christie IMB	Send	IN1=1	
	Christie IMB	Send	IN2=1	1
	Input 4 Input 5 Input 6 Input 7 Input 8 Play Input 1 ON Stop Input 2 ON	Input 4 DIN 4 Input 5 DIN 5 Input 6 DIN 6 Input 7 DIN 7 Input 8 DIN 8 Input 900 Christle_IMB Stop Input 2 ON Christle_IMB	Input 4 DIN 4 Soft Pulse Input 5 DIN 5 Soft Pulse Input 6 DIN 6 Soft Pulse Input 7 DIN 7 Soft Pulse Input 8 DIN 8 Soft Pulse Input 8 DIN 8 Soft Pulse Play Input 1 ON Christie_IMB Send Stop Input 2 ON [Christie_IMB [Send	Input 4 DIN 4 Soft Pulse 1 Input 5 DIN 5 Soft Pulse 1 Input 6 DIN 6 Soft Pulse 1 Input 7 DIN 7 Soft Pulse 1 Input 8 DIN 8 Soft Pulse 1 Input 8 DIN 8 Soft Pulse 1 Pulse DIN 8 Soft Pulse 1 Pulse DIN 8 Soft Pulse 1 Pulse DIN 8 Soft Pulse 1 Soft Pulse In 1 1 Flags Input 1 ON Christie_IMB Send INI=1 Stop Input 2 ON Christie_IMB Send IN2=1

You will then have to 'trigger' the appropriate macro to get the correct message sent to the Christie IMB.

For example, if you want digital input 1 on the JNIOR to send the message IN1=1 to the Christie when the input goes 'on' (from low to high), then you must configure the Trigger Registry Key in the Cinema program for input 1. As shown below, you replace the word 'none' with the name of the macro that you want executed when the digital input goes 'on'.

In the above example, we want to execute the Play Show macro, so we enter Play Show into the Trigger Input 1 registry key.

NOTE: The screen picture below shows how to edit the Registry Keys in the old JNIOR web page. You can also do this functionality in the Registry Editor tab in the JNIOR Support Tool.

I/O Control Configuration Reg	gist	ry Editor Command Line Applications About
		Add Key Edit Key Delete Folder Delete Key Refresh
P- ☐ AppData/ P- ☐ Cinema/	^	AppData/Cinema/Trigger <mark>s/Input1Macro = Play Show</mark> AppData/Cinema/Triggers/Input2Macro = none
— 🗋 \$Quit		AppData/Cinema/Triggers/Input3Macro = none
- 🗋 \$Started		AppData/Cinema/Triggers/Input4Macro = none
— 🗋 CinemaManagerHost		AppData/Cinema/Triggers/Input5Macro = none AppData/Cinema/Triggers/Input5Macro = none
 CinemaServerClient/ 		AppData/Cinema/Triggers/InputoMacro = none AppData/Cinema/Triggers/Input7Macro = none
Client/		AppData/Cinema/Triggers/Input/Macro = none
⊷ 📑 Logic/	=	
🕶 🚍 Logs/		
- C MACROS/		
- 🗋 Name		
Panel/		
SNMP/		
• • • • • • • • • • • • • • • • • • •		
- D Input1Macro		